# INSTRUCTIONS



Ergopet™ I AIR POWERED PIPETTOR Ergopet™ II AIR POWERED PIPETTOR Ergopet™ III AIR POWERED PIPETTOR

## F37907-1011 22.2 CM (8<sup>3</sup>/<sub>4</sub>") F37907-1012 32.4 CM (12<sup>3</sup>/<sub>4</sub>") F37907-1013 42.5 CM (16<sup>3</sup>/<sub>4</sub>")

#### PRINCIPLE OF OPERATION

The Ergopet™ air powered pipettor is powered by a remote air pump that attaches to the pipettor body by two flexible tubes. The pump provides both vacuum for aspiration and positive pressure for dispensing.

#### **ERGONOMIC RANGE OF ADJUSTMENT**

The head of pipettor can be positioned straight ahead in line with the hand or swung up to 90° left or right. This allows unobstructed viewing of the pipette while aspirating and dispensing, all while maintaining a more natural hand position. The nosepiece of the pipettor can also be rotated to change the angle of the pipette from vertical to 15° outwards.

#### **PIPETTE SIZE RANGE**

Glass or plastic pipettes from 1.0 to 100.0ml with an outside mouth diameter of 3.0 to 9.9 mm will fit into the pipette holder.

#### HOUSING

The Ergopet™ housing is made of ABS plastic. The housing may be cleaned with a mild detergent such as Bel-Art's Aquet® (Catalog #17094-0030). Be sure to wipe off the detergent with a moist towel. Do not immerse the entire unit in any fluid.

#### **FILTER**

Each Ergopet™ contains a 25 mm, 0.2 micron PTFE hydrophobic filter that will not allow water to pass through it. This protects the inside of the unit from contamination if it is accidentally overfilled. If the filter becomes wet from overfilling a pipette, it must be replaced (Catalog # H37908-0250).

### **OPERATION**

- While holding the Ergopet™ by the head, insert pipette firmly into the silicone pipette holder.
- 2. To power unit, press rocker switch on power cord to the "ON" position.
- 3. Depress top blue button to aspirate liquid up into pipette.
- 4. Depress middle blue button to dispense liquid out of the pipette.

#### TIP

For anaerobic use, ensure that the remote pump is placed within the anaerobic environment.

#### REPLACING THE FILTER


Replace the filter every two to four weeks depending on usage. The filter must be replaced when it gets wet, (Catalog #H37908-0250). If suction is noticeably decreased, the filter may be clogged and should be replaced. The filter is located within the blue swiveling nosepiece. Remove the blue nosepiece by gently pushing down and outwards on the three tabs to release the nosepiece from

the pipettor head. Gently pull on the silicone pipette holder to remove it and the

replaceable filter from the pipettor. Replace the filter by pressing the shorter luer end of the filter into the silicone pipette holder. Reassemble the filter and pipette holder to the pipettor and reinstall the nosepiece.


#### **SAFETY**

Observe laboratory safety precautions when pipetting hazardous material.

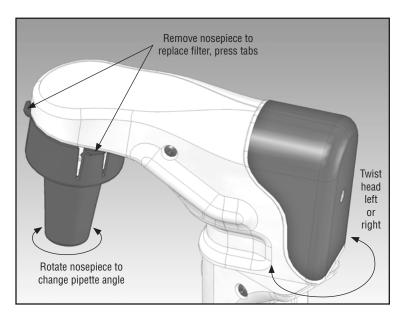



661 Route 23 South, Wayne, NJ 07470

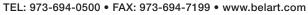



937908692 - 07/16