

Touch-Free™ Automatic Waste Can

Catalog Numbers F13202-0022 (7.3 gallon), F13202-0020 (8.7 gallon), & F13202-0050 (13.2 gallon)

The patented Touch-Free™ Automatic Waste Can opens automatically when your hand or object approaches within 8 inches of the built-in sensor in the lid and closes automatically after 3 seconds. It is safe and simple to operate - ideal for laboratories, hospitals, physician and other medical offices.

Included with each unit are 4 labels: Biohazard, Recycle, Trash and a blank “Label Your Own” label. Select the label that is appropriate for your use and place it on the lid to clearly identify the purpose of the waste can and prevent safety and disposal problems caused by mixed waste.

SP Bel-Art Biohazard Disposal Bags and Clavies® Transparent Autoclavable Bags are available to fit each can. Please see sizing information below:

Waste Can	Can Capacity	Clavies® Autoclavable Bags	Biohazard Bags
F13202-0022	27.6L(7.3gal)	H13185-2430	F13161-0009, F13164-1923, F13165-1923
F13202-0020	33L(8.7gal)	H13185-2430	F13161-0009, F13164-1923, F13165-1923
F13202-0050	50L(13.2gal)	H13185-2436	F13162-0009, F13164-2535, F13165-2535

Set Up

- 1) Before lid assembly, locate power switch on the rear side and turn to OFF (marked “O”).
- 2) Battery compartment is located under the lid. Insert “D” size batteries (not included) and close the battery case. On model F13202-0050, battery compartment is located on back of lid. Size C batteries (not included) are used.
- 3) Place the bag liner inside pail.
- 4) Place the top onto the pail. Your Touch-Free™ Automatic Waste Can is now assembled and ready for use.

Operation

- 5) Press the power switch to ON (marked as “I”). The red indicator light on the lid will illuminate after 4 seconds. It will then flash every 6 seconds to indicate proper functioning.
- 6) To use the Touch-Free™ Automatic Waste Can, move your hand toward the front of the lid. The light will turn green and the lid will open automatically. The lid will remain open until your hand moves away. The lid then closes automatically after 3 seconds.
- 7) Keep Open Feature: Press the “Open” button on the left front part of the lid to keep the lid open for extended time periods. Press the “Close” button on the right front part of the lid to disable this feature and return to automatic mode.
- 8) Battery Indicator: When the red flashing light changes to an amber color, the batteries should be changed. The battery compartment is located under the lid.
- 9) Turn off the power if the Touch-Free™ Automatic Waste Can will be idle for long periods of time.
- 10) Do not open or close the lid manually. Instead, use the “OPEN” or “CLOSE” buttons, if necessary.
- 11) Use cleaning cloths or wipes to clean the removable top. Turn unit OFF and remove batteries BEFORE any cleaning operations are performed. The pail can be washed and dried separately as needed.

Your opinion counts! Write a product review at www.sp-belart.com



Bel-Art Products, a part of SP

661 Route 23 South, Wayne, NJ 07470 USA

Tel: 973-694-0500 | cservice.belart@spindustries.com

sp-belart.com

Individual use varies. Bel-Art Products/SP assumes no obligation or liability for any advice furnished by it or for results obtained with respect to these products. All advice is given and accepted at the user's risk.

For warranty information and to register your product visit sp-belart.com/corporate

