

# INSTRUCTIONS



## Dry Keeper™ Auto Desiccator Cabinet Catalog No. H42056-1003 & H42058-0003

To ensure that your items are being placed into a dry environment, we suggest that your desiccator be allowed to operate while empty for 24 hours.

**Warning:** Do not use this cabinet to store volatile or flammable materials

### Operation

1. Place the cabinet on a level surface and plug into a 115V outlet to start the continuous automatic drying cycles. Both the blue light and green light will illuminate upon plugging in the unit. Both will remain lit while the desiccator is in operation.
2. Adjust shelf height to accommodate items and place items on shelves.
3. For maximum long term drying performance, minimize the amount of time that the door remains open and do not disconnect the cabinet from the electrical source.
4. To clean the cabinet, use a soft cloth. Do not use abrasive cleansers which will leave scratches. We recommend the use of Aquet™ Detergent, Catalog No. F17094-0030 or Cleanware™ Plastic Laboratory Cleaner Catalog No. F17084-0000.



H42056-1003



H42058-0003

**SETTING UP**

Provide a level surface for the cabinet.	Avoid sunlight, high temperatures and moist areas.	For more effective absorption of humidity, do not cover the openings.

**OPERATING TIPS**

Do not put anything on the door or overload the cabinet	Open and close door gently to avoid damage	Do not surround with moist materials

### Accessories

Dry Keeper™ cabinet H42056-1003 is supplied with 3 adjustable shelves and 6 shelf rails. Dry Keeper™ cabinet H42058-0003 is supplied with 2 adjustable shelves and 4 shelf rails. Additional shelves and rails are available from your laboratory supplier.

Shelf Description	Part Number
Shelf for H42056-1003	94205-6602
Shelf for H42058-0003	94205-6802
Shelf rail, order 2 per shelf	94205-3605

661 Route 23 South, Wayne, NJ 07470

TEL: 1-800-423-5278 • FAX: 973-694-7199 • www.belart.com



999320564 – 11/16

Bel-Art – SP Scienceware assumes no obligation or liability for any advice furnished by it, or for results obtained with respect to these products.

All such advice is given and accepted at the buyer's risk.  
© 2016. All Rights Reserved.

Bel-Art® – SP Scienceware® is a division of SP Industries, Inc.



# N O T I C E !

## Desiccator Cabinets

**H42056-0001, H42056-1003, H42058-0001, H42058-0003, H42061-0000**

The hygrometer supplied with this desiccator cabinet is not a precision instrument. It registers high or low humidity, but it is not an accurate indicator of the percent of relative humidity shown on the dial.

If the hygrometer reading becomes lower after the unit has been plugged in for one complete cycle (5 hours or more), the drying mechanism is working. If a more precise measure of the actual relative humidity in the cabinet is required, a portable hygrometer may be placed in the cabinet.

661 Route 23 South, Wayne, NJ 07470

TEL: 1-800-423-5278 • FAX: 973-694-7199 • [www.belart.com](http://www.belart.com)



942056001 – 05/15

# N O T I C E !

## Desiccator Cabinets

**H42056-0001, H42056-1003, H42058-0001, H42058-0003, H42061-0000**

The hygrometer supplied with this desiccator cabinet is not a precision instrument. It registers high or low humidity, but it is not an accurate indicator of the percent of relative humidity shown on the dial.

If the hygrometer reading becomes lower after the unit has been plugged in for one complete cycle (5 hours or more), the drying mechanism is working. If a more precise measure of the actual relative humidity in the cabinet is required, a portable hygrometer may be placed in the cabinet.

661 Route 23 South, Wayne, NJ 07470

TEL: 1-800-423-5278 • FAX: 973-694-7199 • [www.belart.com](http://www.belart.com)



942056001 – 05/15

# N O T I C E !

## Desiccator Cabinets

**H42056-0001, H42056-1003, H42058-0001, H42058-0003, H42061-0000**

The hygrometer supplied with this desiccator cabinet is not a precision instrument. It registers high or low humidity, but it is not an accurate indicator of the percent of relative humidity shown on the dial.

If the hygrometer reading becomes lower after the unit has been plugged in for one complete cycle (5 hours or more), the drying mechanism is working. If a more precise measure of the actual relative humidity in the cabinet is required, a portable hygrometer may be placed in the cabinet.

661 Route 23 South, Wayne, NJ 07470

TEL: 1-800-423-5278 • FAX: 973-694-7199 • [www.belart.com](http://www.belart.com)



942056001 – 05/15